
LABEL LOADING INSTRUCTIONS

The dotted line in the central illustration below (Figure D) shows the path of the labels. Familiarize yourself with it before loading tool. Carefully follow step-by-step instructions.

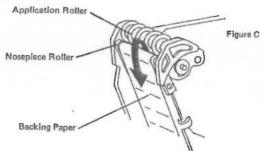

1. Remove cover from left side of tool by pulling out at top.

Remove old label core by rotating core to align core slots with coreholder prongs. Pull off core and snap on new rolls of labels as shown in Figure D.

Note: On models with extended application rollers (Figure C) the label loading procedure differs slightly. Figure C illustrates how the labels should be threaded between the larger application roller on top, and the lower, very small nosepiece roller — with which the label backing paper makes contact (See arrow in Figure C.)

